




## Thule Rapid System Kit 1056



# > Instructions

**CITROËN Xsara**, 3-dr Hatchback, 98-00, 01-06

**CITROËN Xsara**, 5-dr Hatchback, 98-00, 01-06

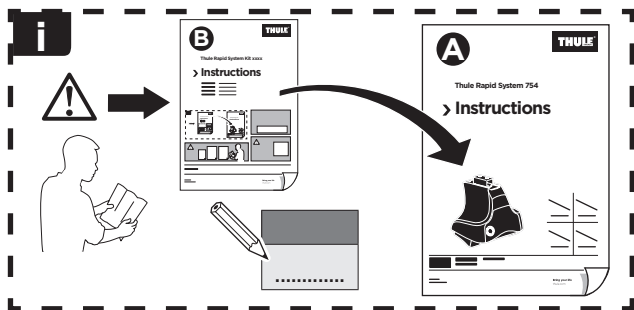

	<b>xx kg</b> <b>xx lbs</b>	+		<b>7 kg</b> <b>15,4 lbs</b>
<b>CITROËN Xsara</b> , 3-dr Hatchback, 98-00, 01-06	=	<b>Max. 55 kg</b> <b>Max. 121 lbs</b>		
<b>CITROËN Xsara</b> , 5-dr Hatchback, 98-00, 01-06	=	<b>Max. 60 kg</b> <b>Max. 132 lbs</b>		

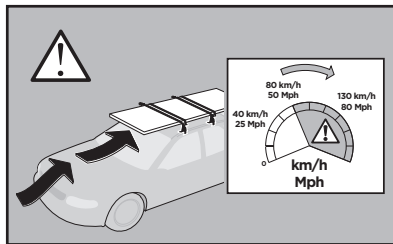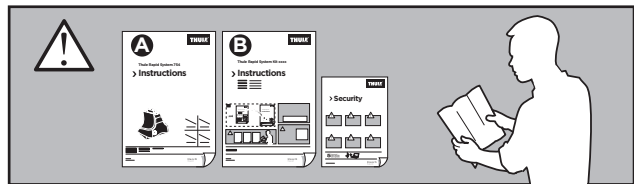

ISO 11154-E

141056

C.20130625  
519-1056-01


Bring your life  
thule.com



04 x2



16 x4



016 x4



205 x2






x1



x1



1

	X (scale)	X (mm)	X (inch)
<b>CITROËN Xsara</b> , 3-dr Hatchback, 98-00, 01-06	21	861	33 <sup>7</sup> / <sub>8</sub>
<b>CITROËN Xsara</b> , 5-dr Hatchback, 98-00, 01-06	21	861	33 <sup>7</sup> / <sub>8</sub>

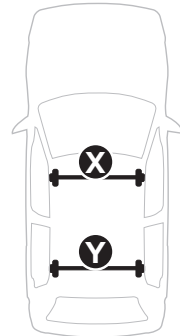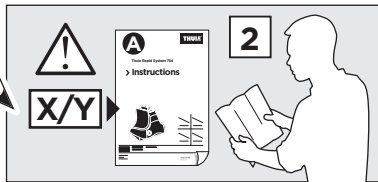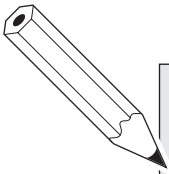


	Y (scale)	Y (mm)	Y (inch)
<b>CITROËN Xsara</b> , 3-dr Hatchback, 98-00, 01-06	21	861	33 <sup>7</sup> / <sub>8</sub>
<b>CITROËN Xsara</b> , 5-dr Hatchback, 98-00, 01-06	18,5	836	32 <sup>7</sup> / <sub>8</sub>


**2**

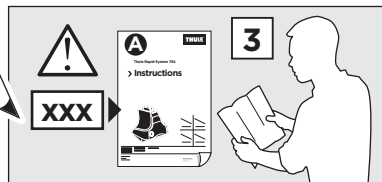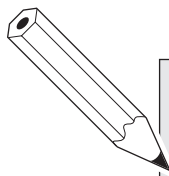


**CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06**

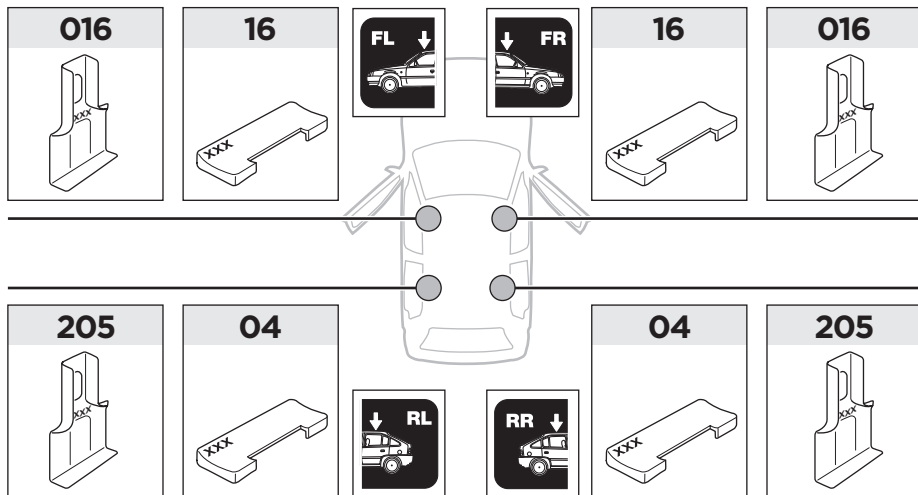

**CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06**





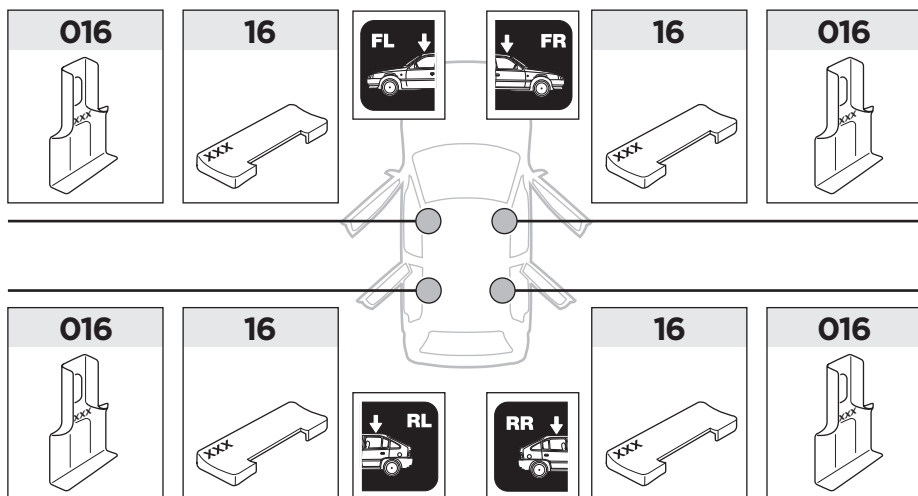


**3**

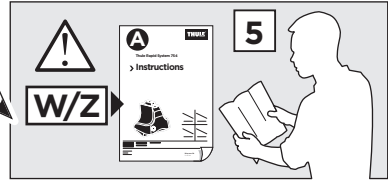

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>CITROËN Xsara</b> , 3-dr Hatchback, 98-00, 01-06	<b>140</b>	<b>660</b>	<b>5 1/2</b>	<b>26</b>
<b>CITROËN Xsara</b> , 5-dr Hatchback, 98-00, 01-06	<b>140</b>	<b>660</b>	<b>5 1/2</b>	<b>26</b>

**CITROËN Xsara**, 3-dr Hatchback, 98-00, 01-06

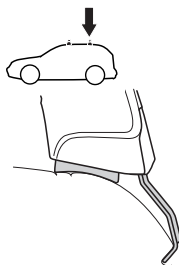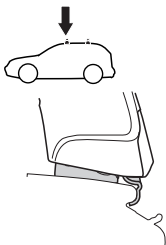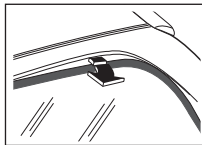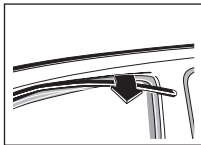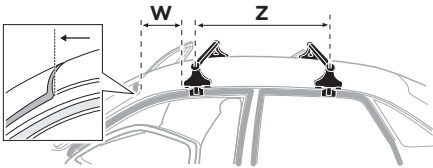

**CITROËN Xsara**, 5-dr Hatchback, 98-00, 01-06

