







Thule Rapid System Kit 1153

> Instructions

TOYOTA Granvia, 5-dr MPV, 95-02

TOYOTA Hi Ace Regius, 5-dr MPV, 97-02

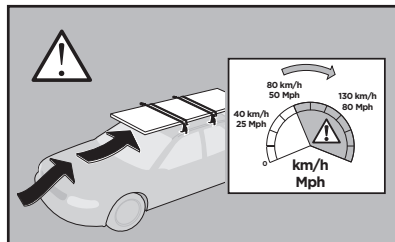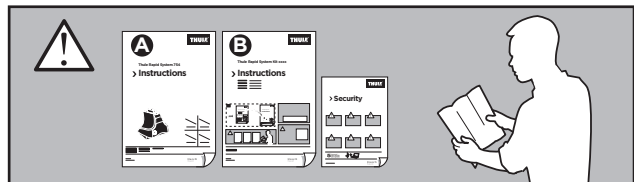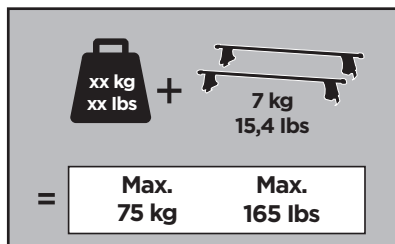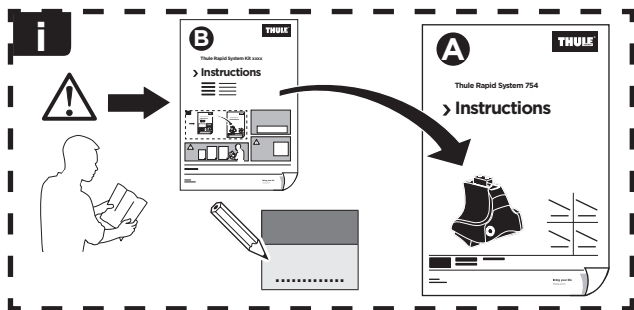

ISO 11154-E


141153

C.20130704
519-1153-02

Bring your life
thule.com



22 x4



300 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Granvia , 5-dr MPV, 95-02	43,5	1086	42 ³ / ₄
TOYOTA Hi Ace Regius , 5-dr MPV, 97-02	32,5	976	38 ³ / ₈

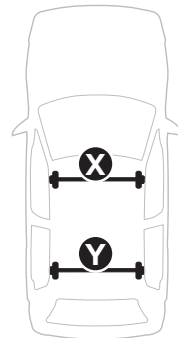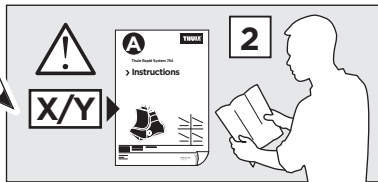
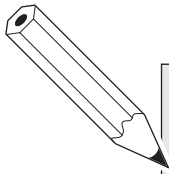


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Granvia , 5-dr MPV, 95-02	43,5	1086	42 ³ / ₄
TOYOTA Hi Ace Regius , 5-dr MPV, 97-02	32,5	976	38 ³ / ₈



2

TOYOTA Granvia, 5-dr MPV, 95-02

TOYOTA Hi Ace Regius, 5-dr MPV, 97-02

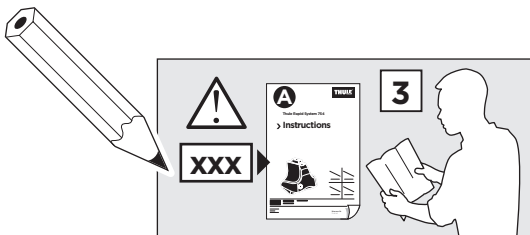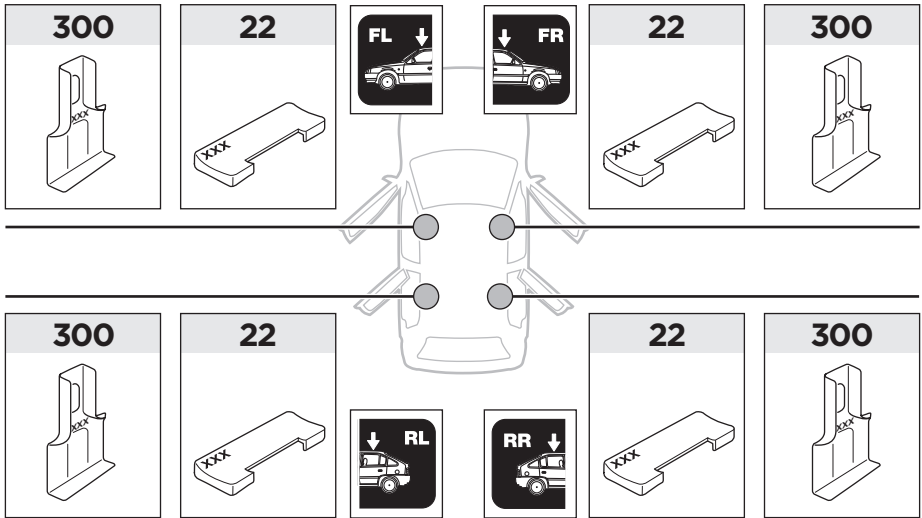

3

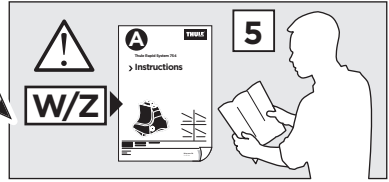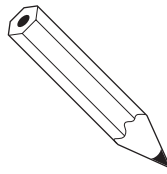

	W (mm)	Y (mm)	Z (mm)	W (inch)	Y (inch)	Z (inch)
TOYOTA Granvia , 5-dr MPV, 95-02	1020	600	620	40 ¹ / ₈	23 ⁵ / ₈	24 ³ / ₈
TOYOTA Hi Ace Regius , 5-dr MPV, 97-02	1020	600	620	40 ¹ / ₈	23 ⁵ / ₈	24 ³ / ₈

