
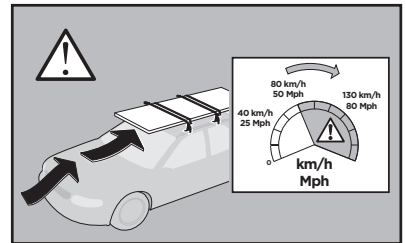
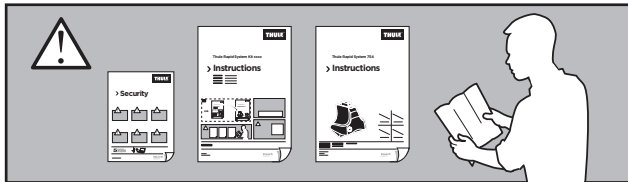
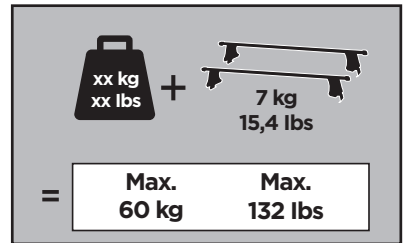







Thule Rapid System Kit 1686

> Instructions

AUDI A1, 5-dr Sportback, 12-


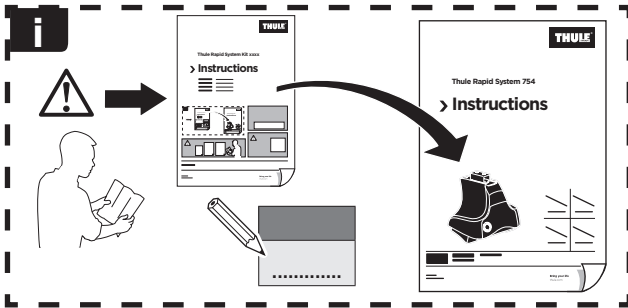


ISO 11154-E

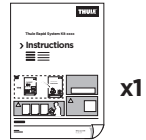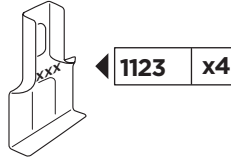

1


	X (scale)	X (mm)	X (inch)
AUDI A1, 5-dr Sportback, 12-	33	981	38 5/8

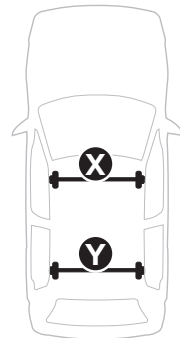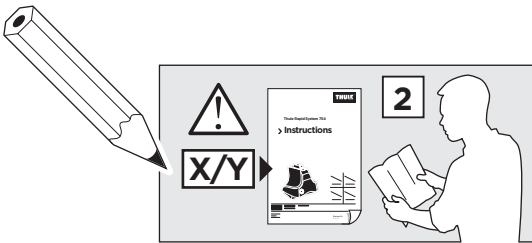


	Y (scale)	Y (mm)	Y (inch)
AUDI A1, 5-dr Sportback, 12-	30,5	956	37 5/8

2

AUDI A1, 5-dr Sportback, 12-

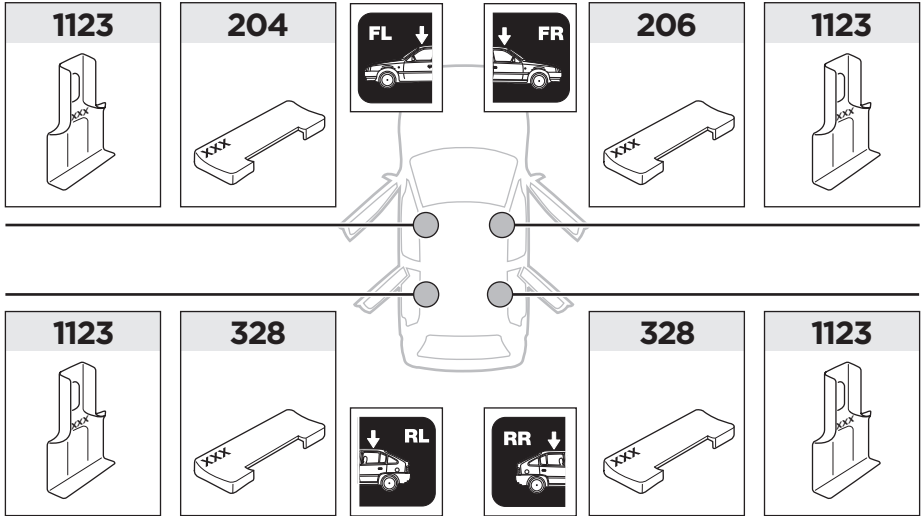

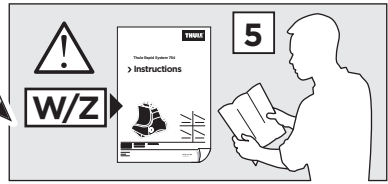3

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A1, 5-dr Sportback, 12-	210	695	8 1/4	27 3/8

